

odm Pixel DD101
INSTRUCTION MANUAL

CONTENTS	PAGE
Product features	2
Function key	2
Time and date setting	3
Animation timetable	4
Battery replacement	4
Remarks	5

PRODUCT FEATURES:

1. By using the pSEL™ flexible display produced by UK pioneer manufacturer, the watch delivers a totally new design concept of stylish timepiece.
2. Hidden timing function (12 hour format)
3. Animation
4. Single function key

FUNCTION KEY:

 
1. Press the function key once, time will be displayed.
2. Press the function key again, date will be displayed.
3. "odm" will appear 4 seconds after the time/date is displayed, and then it will switch off automatically.
4. Press the function key while the time/date is being displayed to switch between the two modes.
5. Press on the function key for over 3 seconds to enter the Setting mode.



← function key

TIME AND DATE SETTING:

Press the function key once to enter Time mode. Press on the function key for 3 seconds to enter the Setting mode. While the "hour" digits are flashing, press the function key to adjust the hour. When the desired hour is set, press on the function key for 3 seconds until the "minute" digit begins flashing to enter the minute setting mode. Press the function key to adjust the minute. Follow the above steps for date setting.

- Setting sequences: hour → minute → year → month → date
- If the function key is untouched for 30 seconds, the watch will automatically exit the Setting mode.
- Setting mode:  means flashing digits



 
Hours setting
12 A - 12 AM



Hours setting
12 P - 12 PM



Minute setting
12 : 38



Year setting
10



Month setting
11



Date setting
11 09



Time display
12 : 38



Date display
9th NOV

ANIMATION TIMETABLE:

Animation scrolling will appear for 3 seconds every following hours: 9:00pm, 10:00pm, 11:00pm, 12:00mn, 1:00am, 2:00am, 3:00am.

If the function key is not being pressed within 24 hours, no animation will be displayed.

BATTERY REPLACEMENT:

When the display becomes dim or is not working, it is time to replace the battery. After replacing the battery, the time and date will be displayed as Jan 1, 2006 12:00, reset is necessary.

Procedures: Using a screwdriver, unscrew the 4 screws on the caseback and flip it open. Then unscrew the 2 screws on the battery cover. Replace a new battery - one CR2025 or equivalent model, and reassemble the battery cover. Slightly insert the point of metal tweezers to the RESET hole once to establish the initial settings. Then reassemble the caseback to finish the battery replacement process.



Remarks:

The display may look vague under sunlight or strong light. As long as it is in a relatively dim environment, the display will be bright and clear. This timepiece is especially suitable for the night life. The performance of the pSEL™ flexible display is at its best during night time.

This watch is equipped with ordinary water resistant construction which can withstand light spray, perspiration, light rain, etc., in daily use. It is strictly not recommended to wear it for showering, bathing, swimming and skin diving.



o.d.m. design & marketing Ltd.

www.odm-design.com