



LED WATCH INSTRUCTION MANUAL

CONTENTS	PAGE
Features	2
Time Mode and Date Mode display format	2
Key Operation	3
Animation	6
Battery Replacement	7

 
FEATURE

- 2-key operation
- Real Time display in Hour & Minute, 12-hour format
- Calendar from 2010 to 2059
- Animation
- Single daily alarm
- Hourly Chime
- Key tone and sound effect


TIME MODE AND DATE MODE DISPLAY FORMAT



Off Mode



Time Display
3:59pm

 

Date Display
29th Mar

KEY OPERATION**Off Mode**

 
- Press [TIME/NEXT] to enter Time Mode.
- Press [DATE/SET] to enter Date Mode.

Time Mode

- Time is displayed for 3 seconds, if no key is pressed it will automatically exit to Off Mode.
- Press [TIME/NEXT] to enter Alarm Mode.
- Press [DATE/SET] to enter Date Mode.
- Press and hold [DATE/SET] for 2 seconds to enter Time Setting Mode.


Date Mode

- Date is displayed for 3 seconds, if no key is pressed it will automatically exit to Off Mode.
- Press [TIME/NEXT] to enter Time Mode.
- Press and hold [DATE/SET] for 2 seconds to enter Date Setting Mode.

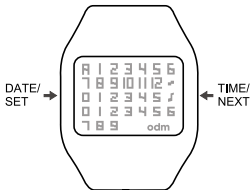


Alarm Mode

 - Alarm time is displayed for 3 seconds, if no key is pressed it will automatically exit to Off Mode.
- Press [TIME/NEXT] to enter Time Mode.
- Press [DATE/SET] once to change alarm status in the sequence below:
alarm off & chime off → alarm on & chime off → alarm on & chime on → alarm off & chime on.
- Press and hold [DATE/SET] for 2 seconds to enter Alarm Setting Mode.



- ☞ Alarm on icon
- ☞ Chime on icon

 Alarm mode
(alarm time 5:00pm, alarm on, chime on)



Alarm mode
(alarm off, chime off)

Time/ Date/ Alarm Setting Mode

- Press [TIME/NEXT] to adjust.
- Press [DATE/SET] to confirm.

- Setting sequence:

 
a) Time Setting: Hour → Min → Exit to Time Mode

b) Date Setting: Year → Month → Date → Exit to Date Mode

c) Alarm Setting: Hour → Min → Exit to Alarm Mode

Note: If alarm time is changed, the alarm function will automatically on.

- If no key is pressed for 30 seconds, it will automatically exit to Time/ Date/ Alarm Mode.




Time setting - hour




Time setting - minute



 
Date setting - year




Date setting - month

 

Date setting - date

 


Alarm time setting - hour

 

Alarm time setting - minute

ANIMATION

 Chime

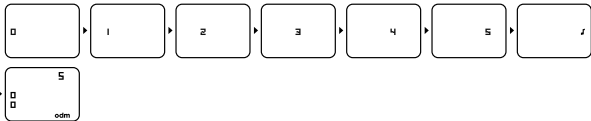

6 - The animation is played once during the chime sound.

Alarm



- Daily alarm animation - the duration same as sound length when alarm time reached. Animation starts form A 1 2 3 4 ... 6 7 ... to odm then alarm time.

BATTERY REPLACEMENT

When your watch's display becomes dim or no display, it is time to replace a new 3V CR2025 or equivalent battery, then use metal tweezers to contact "RESET (RST)" point quickly, the display will return to time mode, please readjust the time and calendar.
The battery should be replaced by trained personnel to avoid damages.

CAUTION

Depending on the colour of the strap, it may change if exposed under the sun for a long time. Please store your watch carefully and avoid prolonged exposure under the sun.

WARNING

By using this or any other o.d.m. timepieces, it is fully understood that the timepiece contains small removable and non-removable parts that could become a CHOKING HAZARD. It is not intended for children under 6 years of age.



o . d . m .

o.d.m. design & marketing ltd.

www.odm-design.com