

SCROLLING MESSAGE DIGITAL WATCH
INSTRUCTION MANUAL


 
CONTENTS	PAGE
Features	2
Scrolling message operation	2
Real time mode setting	3
Calendar mode setting	4
Scrolling message setting	5
Battery replacement	5

FEATURES

1. The scrolling message with time and calendar **always scrolls**.
2. Flip the watch to change the display to Real Time mode or Calendar mode.
3. Real time display in Hour : Minute, 12 or 24 hour format
4. Calendar display in Date : Month : Year

SCROLLING MESSAGE OPERATION

1. In Scrolling Message mode, it shows the scrolling message, real time and calendar or only the message continuously.
2. When you flip the watch over 45 degree from horizontal position, it will change to the Time/Calendar mode. Consecutive flipping of the watch will change the mode, sequence as below:

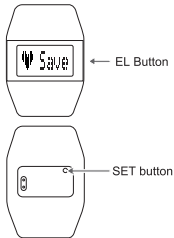

3. Press (EL) button to turn on the EL backlight for 3 seconds, and the display will also change to Real Time mode, press the button again will change to Calendar mode.
4. If no button was pressed for 5 seconds, the watch will return to Scrolling Message mode.

REAL TIME MODE SETTING

Enter to Real Time mode first, and put the watch in horizontal position. Press and hold the (SET) button over 2 seconds to enter Hour Setting mode. Hour digit(s) start flashing and it is ready for adjustment. Press the (SET) button to advance the hour digit(s) in 12/24 hour format, hold the (SET) button over 2 seconds for fast advancing. It can change the time format to 12 hour AM/PM when the hour turning over 24. Flip the watch to enter the Minute Setting mode, the minute setting is same as the Hour digits setting. Flip the watch again to enter the Message Display Setting mode. There are two display formats in options: "M → T → D" (Message → Time → Date) and "M only" (Message Only). Flip the watch once again to complete the setting and return to the Real Time mode.

CALENDAR MODE SETTING

Enter to Calendar mode first, and put the watch in horizontal position. Press and hold the (SET) button over 2 seconds to enter the Calendar Language Setting mode. The LCD flashes to prompt you to select the Language for Calendar display. Press the (SET) button to select the language from Dutch (DU), English (EN), French (FR), German (GE), Italian (IT), Portuguese (PO) and Spanish (SP). Flip the watch to enter Year Setting mode. Year digit(s) start flashing and it is ready for adjustment. Press the (SET) button to advance the Year digits (from 00 to 99), hold the (SET) button over 2 seconds for fast advancing. Flip the watch to enter the Month Setting mode, and flip the watch again will enter Date Setting mode. All the setting method is same as the Year digits setting. Flip the watch once again to complete the setting and return to the Calendar mode.

If no button is pressed for 30 seconds in the Setting mode, all the setting value will not be saved and it will return to the Scrolling Message mode.

SCROLLING MESSAGE SETTING

The message can be changed by an exclusive device, which is available for sale at o.d.m. retailers. Alternatively contact your nearest o.d.m. distributor for the service.

BATTERY REPLACEMENT

When the display becomes dim or the scrolling message stops operating properly, it's time to replace a new CR2025 or equivalent battery. Please ask professional service center to replace the battery.

1. Replace the case set from the watch.
2. Unscrew four screws from caseback.
3. Pull out the battery clip.
4. Replace a new CR2025 or equivalent battery with positive electrode polarity (+) facing up.
5. Time Setting is required after battery replacement.

When the watch is not in use, please place it horizontally (see figure on right) for battery saving purpose.





o.d.m. design & marketing Ltd.

www.odm-design.com