

SDD99B Link
INSTRUCTION MANUAL



CONTENTS	PAGE
Features	2
Operation Description	2
Time Setting	3
Calendar Setting	3
Battery Replacement	4
Notes	4
Warning	6

FEATURES:

- Scrolling message with time and calendar
- Touch keys
- Real time display in Hour: Minute, 12 or 24 hour format
- Calendar display in Date: Month: Year

OPERATION DESCRIPTION:

Scrolling message shows real time and calendar or only the message continuously.

Press on [MODE] key to switch between Time mode and Calendar mode.

Hold [MODE] key for 2 seconds, EL light will be switched on. The mode will be switched between Time mode and Calendar mode once EL light is switched on. Hold [SET] key to enter setting mode for Time or Calendar setting.

Time mode display: Hour : Minute

Calendar mode display: Day : Month : Year



Activate area

TIME SETTING:

In Time mode, hold [SET] until the digit flash to enter Time Setting.

Press [MODE] to switch to next item. The setting sequence is as follows:

Hour → Minute → (M → T → D / M only) → exit

Press [SET] to increase setting value. Press and hold for fast advance.

If no key is being pressed for 30 seconds in Setting mode, the setting value will not be saved and it will automatically return to the Scrolling Message mode.

Remarks:

M → T → D: Scrolling message with Time and Date.

M only: Scrolling message only (without Time and Date)

CALENDAR SETTING:

In Calendar mode, hold [SET] until digit flash to enter Calendar Setting.

Press [MODE] to switch next item. The setting sequence is as follows:

Select Language → Year → Month → Day → exit (*calendar from Year 2000 to 2099*)

Press [SET] to increase the setting value. Press and hold for fast advance.

7 languages can be selected in Calendar setting:

SP- Spanish, DU-Dutch, EN-English, FR-French, GE-German, IT- Italian, PO-Portuguese

BATTERY REPLACEMENT:

When the display dims, or the scrolling message stops operating properly. It is time to replace a new battery.

1. Replace a new CR2025 battery or equivalent battery.
2. Use metal tweezers to slightly contact "RESET" point.
3. Cover the back case and tighten the screws.

The battery should be replaced by trained personnel to avoid damage.

NOTES:

1. The watch has a self-calibration mode to calibrate the sensitivity of touch function in first 5 minutes after new battery replacement. It is recommended to cover the case back immediately and avoid pressing any key within the calibration period. Otherwise, it may affect touch key function.
2. The touch surface is sensitive to water, human body and metal object, getting close to either one may cause mode change.

When touch key surface is in contact with water, none of the functions can be activated. Once touch surface got wet, pat it dry and leave it for 5 minutes, the touch key function will be resumed.

3. Please avoid holding any key for over 1 minute, the touch function could become poor in sensitivity, or give no response. For no key response, please leave it and do not touch any key for 5 minutes, touch function will then be resumed.
4. To achieve well sensitivity of the touch function, it is recommended to contact the case back during key pressing.

NOTES FOR WEARING TOUCH SENSOR WATCHES

DO NOT WEAR THIS WATCH WHILE SWIMMING OR ANY OTHER WATER ACTIVITIES

When immersed in water, the watch will become malfunction. Once the touch surface got wet, pat it dry and leave it for 5 minutes, the touch key function will then be resumed.

The touch sensor is located on both sides of the watch case. Long time contact of the touch sensor to metals or dielectric material such as glass or plastic may lower the sensitivity of touch function. Move the watch away from the material and leave it for 5 minutes, the touch key function will be resumed. When the watch is not in use, please place it facing up to avoid touch sensor in contact to the ground.

The touch sensor function may be affected by strong electrical interference. Avoid any operation, such as time setting, under this circumstance.

WARNING:

By using this or any other o.d.m. watches, it is fully understood that the timepiece contains small removable and non removable parts that could become a CHOKING HAZARD. It is not intended for children under 6 years of age.