



 
**< SU53-UNERRING III >
INSTRUCTION MANUAL**

CHRONOGRAPH MODELS (SII VD57)

1/10 second hand
for chronograph

Minute hand for
chronograph

Second hand for
chronograph



A ← Start/Stop



B ← Split/Reset

- 1: Crown at normal position.
- 2: Crown at 1st click position.
- 3: Crown at 2nd click position.

DATE SETTING :

1. Crown pulled out to 1st click.
2. Turn the crown clockwise to set the date.

TIME SETTING :

1. Crown pulled out to 2nd click.
2. Turn the crown clockwise until the date advanced to present date.
3. Turn the crown clockwise to set the correct time.
4. Push the crown back to normal position.

CHRONOGRAPH :

1. Press button A to start and stop the chronograph.
2. Press button B to reset the chronograph to "0"
3. If chronograph is running, press button B to start and stop the split time.

ADJUSTING THE CHRONOGRAPH :

Before running the chronograph, check if the chronograph second and minute hands are in the "0" position. If either of the hands are not in the "0" position, pull out the crown to 2nd click position, then press button A or button B to reset the chronograph second or minute hands to "0" position. Push the crown back to normal position.

NOTICE :

After replacing battery, use a metal tweezer to short circuit "AC" and the battery connection "+".