



< UniT SU85 >
INSTRUCTION MANUAL

INSTRUCTION MANUAL

FEATURES:

1. One crown operation for analog and digital time
2. Real time display with hour, minute, second
3. Two calendar display modes: month, date & day-of-week or month, date & week number
4. Chronograph counts up to 99hr 59min 59sec



ANALOG TIME (3 hands)

Pull crown out to position 2 and rotate the crown forward or backward to set the time. Push crown back to position 1 when the desired time is set.

DIGITAL TIME

Operation:

Rotate the crown forward or backward at an even speed (not too slow) to change modes between real time display, calendar 1 (month, date, day-of-week), calendar 2 (month, date, week number) and chronograph.

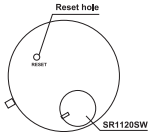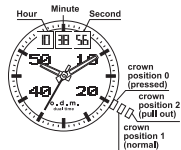

Time and Date Setting:

1. In real time mode, press and hold the crown to position 0 until the hour digits flash to enter setting mode.
2. Rotate the crown forward or backward to adjust hour. The 12-hour format or 24-hour format can be set when adjusting the hour digit.
3. When the desired hour is set, press the crown to position 0 once and go for minute setting.
4. Repeat step 2 to 3 for setting minutes, seconds, year, month and date.

Chronograph mode:

Within 1 hour: Shows minute, second & 1/100 second

Over 1 hour: Shows hour, minute & second (When counted over 1 hour, the hour digit flashes)

Chronograph setting:

1. Press the crown to position 0 once to start the chronograph. Press it again to stop or pause the chronograph.
2. When chronograph stopped, press & hold the crown to position 0 over 2 seconds to reset the chronograph to 00:00:00.

Remark:

If the crown is not being pressed within 30 seconds, the setting will be saved and the setting mode will be exited automatically.

Low Battery Indication and Battery Replacement:

When the display becomes dim and "LO BAT" is flashed, it's time to replace a new SR1120SW or equivalent battery. After the battery is replaced, use a metal tweezers to contact "RESET" hole quickly, the display will return to real time mode. Please ask professional center to replace battery.